INSTALLATION GUIDE

Vertical wall assembly sequence

Install the wall sheets from left to right, starting with the bottom row.

Fix the first sheet (No.1) in position and secure it along each girt line in the recommended fixing valleys.

Install the second, third, fourth and fifth sheets (No.2–5) by overlapping each sheet at the sidelap and fixing them in the same way as the first sheet.

Once the bottom row is complete, begin the second row above.

Position the first upper sheet (No.6) so that it overlaps the sheet below by the required vertical overlap and fix it into the girts.

Continue installing the remaining upper sheets (No.7 and No.8) from left to right, ensuring each sheet overlaps correctly and is fixed in the same fixing pattern.

Check that all sheets are correctly aligned, overlapped, and securely fixed to every girt line before continuing with the next section of wall.

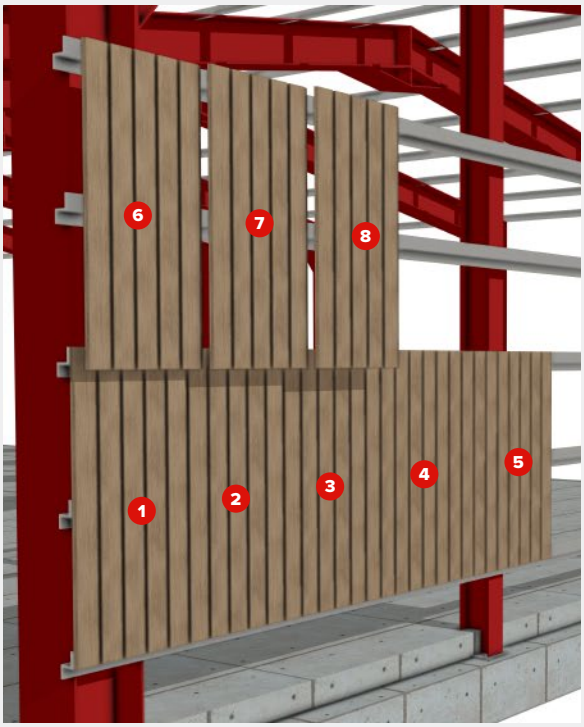

Important safety information

Our woodgrain profile can be handled by one person but it is important for installers to wear safety equipment such as gloves to prevent any accidental injuries.

Fixings guide

Install the first sheet from left to right.

Start by fixing into the first full valley (No.1), then continue fixing into every valley at each purlin line (No.2–8).

Once the first sheet is secured, position the second sheet by overlapping the sidelap valley over the final valley of the first sheet, then fix this point (No.9).

Continue fixing the second sheet in the same pattern as the first, securing fixings No.10 through No.18 along each purlin line.
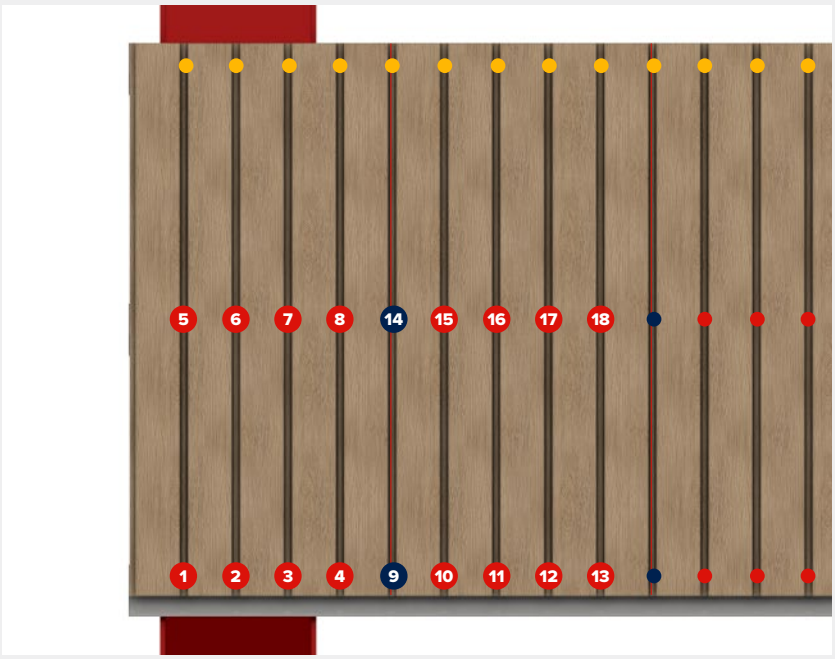
If installing additional sheets above the first row, ensure the sheets overlap by a minimum of 150mm. Continue fixing through the same valleys shown by the yellow fixing points.